
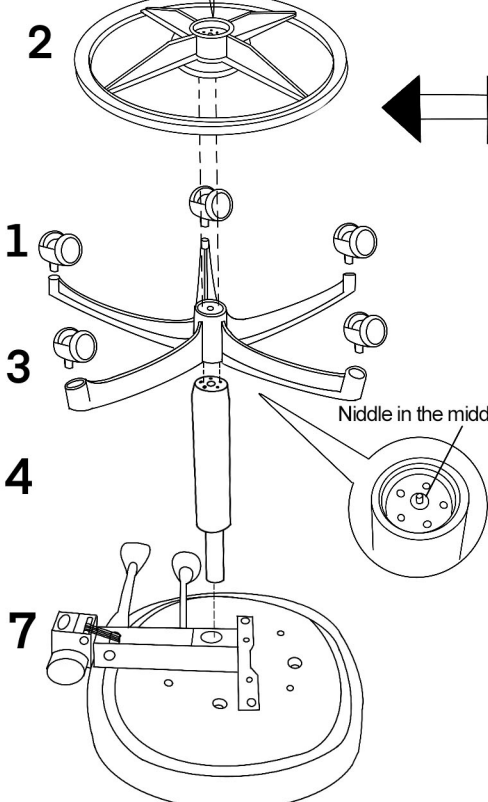


Parts names and packing list

- 1, Castors 5 pcs
- 2, Foot operated ring 1 pc
- 3, Five star base 1 pc
- 4, Gas cylinder 1 pc
- 5, Arm-rest metal parts 1 pc
- 6, Arm-rest PU parts 2 pcs
- 7, Seating cushion 1 pc
- 8, Back-rest 1 pc

Install the foot operated base

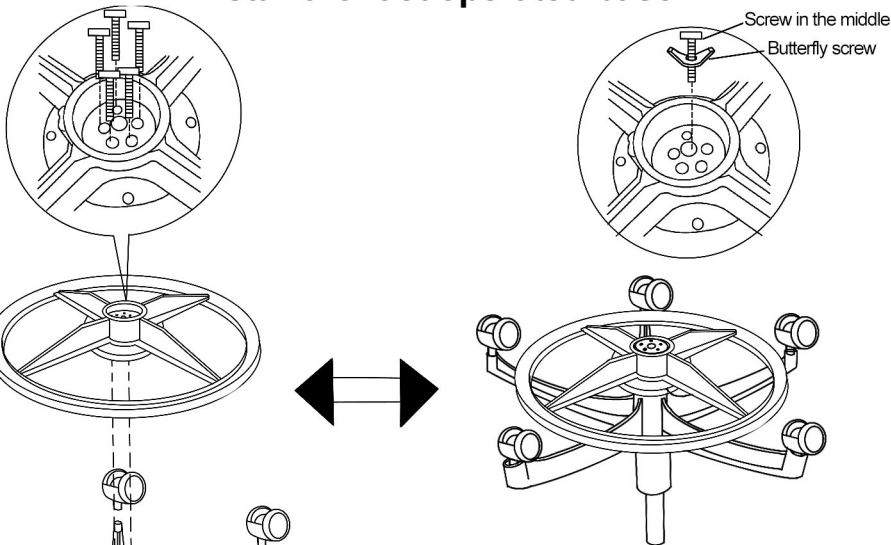

Step 1: Put the gas cylinder(4) onto the seating cushion (7).


Step 2: Insert the castor (1) into the five star base(3).

Step 3: Put the installed five star base (3) with castor(1) onto the gas cylinder(4).


Step 4: Put the foot operating ring(2) on the five star base (3), fasten with 5 bolts .

Step 5: Twist the screw in the middle of foot operating ring (2) to just touch the niddle in the middle of the gas cylinder (4) , then fasten the butterfly screw to fix the position of the middle screw.

Install the arm-rest

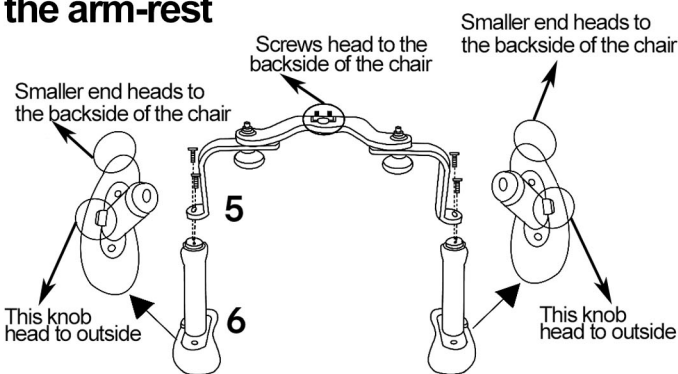

Step 6: Put the arm-rest PU part (6) upside down on a desk , remember to put the small end of the part to the backside of the chair, and the two knobs head to the outside . Put on the arm-rest metal part (5) and fasten with 4 screws .

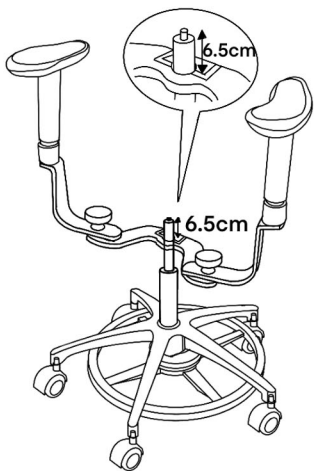

Step 7 : Take away temporarily the seating cushion (7), and put the installed arm-rest (5+6) on gas cylinde(4) , istalled with (1+2+3), make sure to reserve 6.5-8.0cm on top of the cylinder and fasten it with 2 screws

Install the chair

Step 8: Put the seating cushion(7) on the gas cylinder(4), fully installed with 1+2+3+4+5+6.

Step 9: Insert the back-rest(8) on the seating cushion(7)

